



AT2400 AllTouch® Remote Control



Bringing the Interactive Experience Home™

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note
This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by Scientific-Atlanta could void the user's authority to operate this equipment.



United States: Scientific-Atlanta, Inc.,
5030 Sugarloaf Parkway, Box 465447,
Lawrenceville, GA 30042
Europe: Scientific-Atlanta Europe GmbH,
Westerbachstrasse 28-32, 61476 Kronberg, Germany
Asia-Pacific: Scientific-Atlanta (Singapore) Pte. Ltd.,
1 Claymore Drive, #08-11 Orchard Towers,
Singapore 229594
Latin America: Scientific-Atlanta Argentina S.A.,
Carlos Pelligrini 1149, Piso 11º, Capital Federal 1011,
Buenos Aires, Argentina
© 2002 Scientific-Atlanta, Inc. All rights reserved.
Printed in USA www.scientificatlanta.com
Part Number 749221 Rev B February 2002

CBL Setup Codes

About Cable Codes

Your cable service provider may have "locked" a valid cable code into your remote to keep you from unintentionally changing the cable code.

If you need to program the remote to operate a different device, use the following steps to unlock the remote.

1. Press and hold the **SELECT** key and the **CBL** key until the LED blinks twice.
2. Press **996**.
3. Press **CH-** to unlock the remote.

Result: You can now set up your CBL key with a different cable code.

Cable Codes

You must enter all 4 digits to program the CBL mode key.

Brand—Code
General Instrument—0290, 0490, 0824
Jerrold—0290, 0490, 0824
Motorola—1120
Panasonic—0121
Pioneer—0547, 0891, 1891
Scientific Atlanta—0491, 0891, 1891

The Explorer eClub

The Explorer eClub is an online club that provides news about the Explorer DHCT and offers you a chance to win prizes and other premium items.

To join the Explorer eClub, you must enter the serial number of your DHCT. The number is located on a label on the bottom of your DHCT, and begins with S/N. Also, your cable service provider may need this number if your DHCT requires service. Write the serial number here:

S/N _____

You can access the Explorer eClub on the Internet at www.scientificatlanta.com/explorercub

AUX Setup Codes

Receiver Codes

Brand—Code	Brand—Code
ADC—0545	Panasonic—0053, 1532
Aiwa—1419, 0172, 1103	Philips—1103, 1203, 1283
Capetronic—0545	Pioneer—0545, 1037
Carver—1103, 1203	Proscan—1268
Denon—1174, 1118	Quasar—0053
JVC—0088	RCA—1268, 0545, 1037
Kenwood—0041, 1041, 1327, 1583, 1584	Sansui—1103
MCS—0053	Sony—0172, 1172, 1072, 1272
Magnavox—1103, 0545, 1203	Sunfire—1327
Marantz—1203, 1103, 0053	Technics—0053, 1322, 1532, 1323
Onkyo—0149	Thorens—1203
Optimus—1037, 0545	Victor—0088
	Wards—0172
	Yamaha—0190, 1190

Amplifier Codes

Brand—Code	Brand—Code
GE—0092	Philips—0906
Harman/Kardon—0906	Polk Audio—0906
JVC—0345	Realistic—0409
Luxman—0179	Sansui—0335
Marantz—0335, 0906	Sony—0703
Nakamichi—0335	Soundesign—0092
Optimus—0409	Victor—0345
	Wards—0092
	Yamaha—0368

Home Automation Codes

Brand—Code
GE—0254
One For All—0181
Radio Shack—0254
Security System—0181
Universal X10—0181
X10—0181

Additional Audio Codes

These codes allow you to program your remote to control cable radio set-top devices.

Brand—Code
Jerrold—0473, 0534
Scientific Atlanta—0474
Starcom—0473

About Your Remote

Your new AT2400 AllTouch® Remote Control ("remote") functions as four remotes in one to operate your TV, VCR, cable set-top device, or CD player. If you prefer, you can program the AT2400 AllTouch Remote Control to operate additional electronic devices, such as a stereo receiver, a DVD player, or a home automation device.

For information about the keys on the remote, go to the **Quick Reference** section of this guide.

Note: If you have questions or concerns about the operation of this remote, contact your cable service provider.

Batteries

The remote requires two alkaline AA batteries. When batteries are properly installed, the LED on the remote blinks each time a button is pressed.

Important Reminder: A diagram in the battery compartment of the remote indicates proper placement of the batteries.

Mode Keys and Setup Codes

Q: What are mode keys?

A: The mode keys switch the remote to operate a particular device. These four keys are located at the top of the remote.



Q: What are setup codes?

A: Setup codes are numeric codes that identify your brand of equipment so that the remote can operate that device.

Important Reminder: The AT2400 AllTouch Remote Control is not a toy. It should be kept out of the reach of children under the age of 6 years.

Setting Up Your Remote

To Set Up a Mode Key

The mode keys are programmed with most of the popular brands of electronic devices, so before you perform this procedure, test each mode key.

To test the mode key, turn on your device, press the mode key for that device, and then press **POWER** on the remote to verify that the power to the device turns off.

If the device does not turn off, then the mode key may not be set up. Follow these steps to set up a mode key:

1. Find the code for your brand of device in one of the setup code lists in this guide.
2. Make sure that the device is turned on.
3. Press and hold the **SELECT** key and the appropriate mode key for that device until the LED (the light at the top of the remote) blinks twice. For example, to set up the VCR key, press and hold **SELECT** and **VCR**.
4. Enter the setup code for the device.
Note: The setup codes for each mode key appear on the front and the back of this guide.
5. Point the remote toward the device.
6. Press **POWER**, **PLAY**, or **CH+** to test the device.
7. Did the device operate correctly?
 - If **yes**, go to step 8.
 - If **no**, repeat steps 3 through 6 using a different setup code.
8. Repeat steps 1 through 6 for each mode key that you want to set up.
9. Write down your codes for future reference:

AUX: _____ VCR: _____

TV: _____ CBL: _____

To Search for Codes

If none of the codes listed for your device work, you can search through the code library for a valid code. The remote automatically selects the proper code.

1. Turn on the device.
2. Hold down the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice. For example, to search for a TV code, hold down **SELECT** and **TV**.
3. Using the keypad on the remote, press **991**. The LED blinks once.
4. Point the remote toward the device, and press the **POWER** key.
5. Did the device turn off?
 - If **no**, press the up arrow key to go to the next code, and return to step 4.
 - If **yes**, press **SELECT** to confirm the code.

Note: The LED on the remote blinks three times when you reach the end of the code library. Each of the code libraries contains fewer than 80 codes.

To Identify Programmed Codes

You can find out which code you used to program your device by using the following procedure.

1. Hold the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice.
2. Using the keypad on the remote, press **990**. The LED blinks twice.
3. Press **1**; then, count the LED blinks. The number of LED blinks indicates the first digit in the code. For example, 4 blinks indicates the first digit in the code is 4. If the LED does not blink, the digit is 0.
4. Press **2**; then, count the LED blinks. The number of blinks indicates the second digit in the code.
5. Press **3**; then, count the LED blinks. The number of blinks indicates the third digit in the code.

6. Press **4**; then, count the LED blinks. The number of blinks indicates the fourth digit in the code.
7. Write down your codes in the **To Set Up a Mode Key** section.

To Program for Volume Control


You can program your Volume and Mute keys to function in one of two ways:

- To control the volume on a single device all the time
- To control the volume on each device, depending on the mode key that you press

Note: The default setting is to control volume through your TV all the time. Follow these steps to change the way your Volume and Mute keys function.

1. Turn on the appropriate device.
2. If you have an Explorer® Digital Home Communication Terminal (DHCT), use the **SETTINGS** button to go to the General Settings menu on-screen, and make sure that the Audio: Volume Control setting is set to "Variable."
3. Hold the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice.
4. Using the keypad on the remote, press **993**. The LED blinks twice.
5. Do you want the Volume and Mute keys to operate a single device all the time?
 - If **yes**, press the mode key for the device that you want to control the volume.
 - If **no**, press the **VOL -** key to control the volume through various devices based on the mode key.
6. Point the remote toward the device and confirm that the Volume and Mute keys function as expected.

Quick Reference

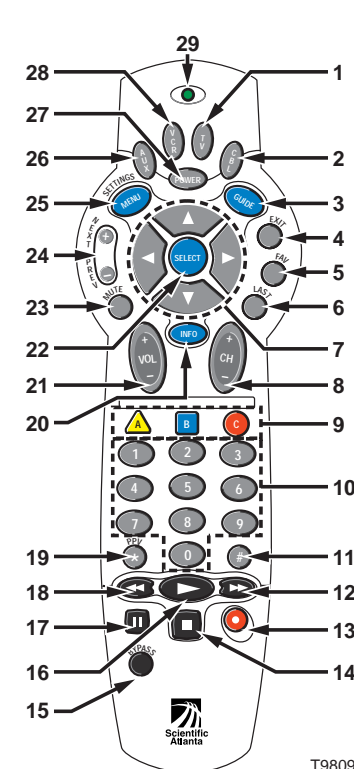

Viewing and Browsing Control

- 11 Functions vary by cable service provider
- 9 Selects options in menus and IPG
- 3 Displays interactive guide
- 25 Displays cable settings or menu
- 7 Moves through selections
- 22 Selects and deselects screen item
- 20 Displays channel and program information
- 8 Selects channels, up or down
- 5 Views favorite channels
- 6 Returns to last channel viewed
- 10 Enters channel numbers (also enters your parental control PIN)
- 19 Features vary by cable service provider; some provide access to pay-per-view features. **Note:** Explorer DHCTs provide access through on-screen options.
- 24 Navigates through IPG or settings
- 4 Exits settings, menus, and guides

Mode

- 1 TV Mode Key
- 2 Cable Mode Key
- 26 AUX Mode Key
- 28 VCR Mode Key

Sound

- 21 Adjusts volume
- 23 Mutes sound

Device Control

- 27 POWERS on or off
- 29 LED
- 15 Functions as follows:
 - In VCR mode, switches TV/VCR input
 - In TV mode, switches TV/Video input
 - In CBL mode, controls Bypass option

VCR/VOD Control

Note: In VCR mode, these keys control your VCR.

- 12 Fast forwards VCR/VOD
- 13 Records program
- 14 Stops VCR/VOD
- 16 Plays VCR/VOD
- 17 Pauses VCR/VOD
- 18 Rewinds VCR/VOD

TV Setup Codes

Enter all 4 digits to program the TV mode key.

Brand—Code	Code	Brand—Code	Code	Brand—Code	Code
AOC—0033, 0044	Funai—0194, 0185, 0193	Minutz—0035	Sansui—0477	Sanyo—0168	
Admiral—0107, 0477	Futurtech—0194	Mitsubishi—0164, 0192, 0033, 0107	Scimitu—0033	Scotch—0192	
Aiko—0106	GE—0035, 0061, 1361, 0065, 0192, 0465, 1161, 0107, 0761	Motorola—0107	Scott—0250, 0033, 0192, 0193, 0194	Sears—0168, 0070, 0170, 0061, 0068, 0185, 0192, 0193, 0761	
Aiwa—0715		Multitech—0194			
Akai—0044		NAD—0170, 0180, 0192			
Alaron—0193		NEC—0044, 0033, 0070			
America Action—0194		NTC—0106			
Ampro—0765		Nikko—0192, 0044, 0106			
Anam—0194		Onwa—0194			
Audiovox—0106, 0194, 0465, 0637		Optimus—0264, 0180, 0168			
Baysonic—0194		Optonica—0107			
Belcor—0033		Orion—0477, 0193, 0250			
Bell & Howell—0030, 0168		Panasonic—0065, 0264			
Bradford—0194		Penney—0061, 1361, 0074, 0044, 0035, 0192, 0065, 0033, 0070, 0170, 0761			
Brockwood—0033		Philco—0159, 0033, 0044, 0068, 0477			
Broksonic—0250, 0477		Philips—0068			
CXC—0194		Pilot—0033, 0044			
Candle—0044, 0070		Pioneer—0180, 0693			
Carnivale—0044		Portland—0033, 0106			
Carver—0068		Princeton—0731			
Celebrity—0014		Prism—0065			
Cineral—0465, 0106		Proscan—0061, 0761			
Citizen—0070, 0044, 0074, 0106		Proton—0192			
Concerto—0070		Pulsar—0031, 0033			
Contec—0194		Quasar—0065, 0264			
Craig—0194		RCA—0061, 1361, 1161, 0693, 1261, 0033, 0065, 0104, 0107, 0761, 1061, 1461			
Crosley—0068		Radio Shack—0194, 0044, 0192, 0168, 0033, 0061, 0070, 0761			
Crown—0194		Realistic—0194, 0168, 0044, 0192, 0033, 0070			
Curtis Mathes—0074, 0044, 0030, 0061, 0065, 0068, 0070, 0107, 0159, 0168, 0180, 0465, 0761, 1161, 1361		Runco—0617, 0031, 0044			
Daewoo—0106, 0637, 0033, 0638, 0465		SSS—0033, 0194			
Daytron—0033		Sampo—0044			
Denon—0159		Samsung—0074, 0033, 0192, 0044, 0070			
Dumont—0031, 0033		Sansui—0465			
Dwin—0788					
Electroband—0014					
Emerson—0250, 0194, 0192, 0193, 0477, 0638, 0637, 0033, 0168					
Envision—0044					
Fisher—0168					
Fujitsu—0193					

VCR Setup Codes (for VCRs, DVDs, and CD players)

Use the VCR mode key to program your VCR, DVD, or CD player.

Enter all 4 digits to program the VCR mode key.

VCR Codes	Brand—Code	Code	Brand—Code	Code	Brand—Code	Code
Funai—0014	Memorex—0118,	Pulsar—0053	Sylvania—0049, 0095,			
GE—0049, 0074, 0062, 0254, 0774	0061, 0493, 0014, 0051, 0062, 0049, 0254, 1051, 0053, 0176, 0223, 1176, 1276	Quasar—0049, 0176, 1176	0014, 0057			
Admiral—0062, 0223	Garrard—0014	RCA—0074, 0056, 0049, 0062, 0254, 0774	Symphonic—0014			
Adventura—0014	GoldStar—0051		TMK—0254			
Aiwa—0014, 0051	Gradiente—0014		Tatung—0055			
Akai—0055	HI-Q—0061	Minolta—0056	Teac—0014, 0055			
American High—0049	Harley Davidson—0014	Radio Shack—0014, 1051	Technics—0049, 0176			
Asha—0254	Harman/Kardon—0095	Radix—0051	Teknika—0014, 0049, 0051			
Audiovox—0051	Harwood—0086	Randex—0051	Thomas—0014			
Beaumarck—0254	Hitachi—0056, 0014, 0055	Realistic—0014, 0118, 0061, 0062, 0051, 0049	Tivo—0632, 0650			
Bell & Howell—0118	Hughes Network Systems—0056	ReplayTV—0628, 0630	Toshiba—0059, 0057			
Broksonic—0135, 0198, 0223, 0493	JVC—0081, 0055	Runco—0053	Totevision—0051, 0254			
CCE—0086	Jensen—0055	STS—0056	Unitech—0254			
Calix—0051	KEC—0051	Samsung—0059, 0254	Vector—0059			
Canon—0049	KLH—0086	Sanky—0053, 0062	Video Concepts—0059			
Carver—0095	Kenwood—0055, 0081	Sansui—0055, 0493, 0014, 0081, 0223	Videosonic—0254			
Citizen—0051	Kodak—0049, 0051	Sanyo—0061, 0118, 0254	Wards—0049, 0074, 0014, 0061, 0254, 0056, 0062, 0086, 0095, 0774			
Colt—0086	LXI—0051	Scott—0198, 0135, 0057, 0059	White Westinghouse—0086, 0223			
Craig—0051, 0086, 0061, 0254	Logik—0086	Sears—0051, 0056, 0014, 0049, 0061, 0118	XR-1000—0086, 0014, 0049			
Curtis Mathes—0049, 0055, 0074, 0176, 0774	MEI—0049	Semp—0059	Zenith—0053, 0014, 0047, 0223, 0493			
Cybernex—0254	MGA—0057, 0254	Sharp—0062				
Daewoo—0059	MGN Technology—0254	Shintom—0086				
Denon—0056	MTC—0014, 0254	Shogun—0254				
Dynatech—0014	Magnavox—0049, 0095, 0014, 0053	Singer—0086				
Electrohome—0051	Magnin—0254	Sony—0047, 0046, 0014, 0049, 0650, 1046				
Emerex—0046	Marantz—0095, 0049	Profitronic—0254				
Emerson—0198, 0223, 0135, 0493, 0014, 0051, 0057	Marta—0051	Proscan—0074, 0774				
Fisher—0061, 0118	Matsushita—0049, 0176	Protec—0086				
Fuji—0047, 0049						

DVD Codes

- Apex—0686
- Denon—0504
- Fisher—0684
- GE—0536
- Gradiente—0665
- Hitachi—0587, 0678
- Hiteker—0686
- JVC—0637, 0572
- Kenwood—0548
- Magnavox—0517, 0689
- Marantz—0553
- Mitsubishi—0535
- Onkyo—0517
- Optimus—0585
- Oritron—0665
- Panasonic—0504, 0646
- Philips—0553, 0517
- Pioneer—0585, 0539, 0646
- Proscan—0536
- RCA—0536, 0585
- Samsung—0587
- Sharp—0644
- Sony—0547
- Technics—0504
- Theta Digital—0585
- Toshiba—0517
- Yamaha—0504, 0559
- Zenith—0605, 0517

CD Codes

- Optimus—0046, 0193, 1077, 0014, 0051
- Panasonic—0043
- Philips—0171, 0640
- Pioneer—0046, 1076, 1077
- Polk Audio—0171
- Proton—0171
- QED—0171
- Quasar—0043
- RCA—0046, 1076, 0193
- Realistic—0193
- Rotel—0171
- SAE—0171
- Sansui—0171
- Sanyo—0193
- Sharp—0051, 0875
- Sherwood—1081
- Sonic Frontiers—0171
- Sony—0014, 0504
- Technics—0043
- Victor—0086
- Wards—0171
- Yamaha—0902

Setup codes for the AUX and CBL mode keys are located on page 7 of this guide.